

MS 29 INSTRUCTIONS





Mesrutiyet caddesi. Hatay Sokak. 17/B 06640. Kızılay / Ankara Turkey

Tel: +90 312 417 72 75
Fax: +90 312 425 72 81
Web: www.oliser.com.tr
Email: oliser@oliser.com.tr



preparation

Place an Ink supply bottle to the back of the machine and insert the ink supply tube into the bottle.

Plug in the plug and the machine will be ready to start filling.

Now, The machine is ready to fill the cartridges. Before filling the cartridges, be sure that they are empty. If not, evacuate the remaining ink from cartrdige.

This machine is desinged to only fill FRESH CARTRIDGES (you can also fill non-fresh cartridges using a steam generator before filling)

Strictly recommended: Before filling the cartridges we recommend you to clean the printheads of the cartridges by a steam genarator. It will help you to fill the cartridges easily and will open the all clogged or dried printheads, So, your success rate will inscrease







Place the cartridge in to the evacuation station if necessary



Before filling take note that the cartridge is not full or faulty. If the cartridge is not empty place it in the evacuation station and switch on the Evacuation switch to start Evacuation



Then remove the cartridge.



Place the cartridge in to the filling station.





Secure the cartridge by pushing the handle up.



Push the Start / Stop Button to start the filling operation

The cartridge will be filled in 2,5 minutes and pressurizing will also be done. If there is a problem while filling simply push the start /stop button and the opperation will automaticly stop.



Then remove the cartridge using the handle



For start up the cartridge, replace the cartridge into evacuation station and do evacuation 3-4 seconds, then remove cartridge and test it.



Tube replacement of motors















