

MS 45 INSTRUCTIONS



Mesrutiyet caddesi. Hatay Sokak. 17/B
06640. Kızılay / Ankara
Turkey
Tel : +90 312 417 72 75
Fax : +90 312 425 72 81
Web : www.oliser.com.tr
Email : oliser@oliser.com.tr



preparation

Place an Ink supply bottle to the back of the machine and insert the ink supply tube into the bottle.

Plug in the plug and the machine will be ready to start filling .

Now, The machine is ready to fill the cartridges. Before filling the cartridges, be sure that they are empty. If not, evacuate the remaining ink from cartridge.

This machine is designed to only fill FRESH CARTRIDGES if u do not have a steam generator.

Strictly recommended : Before filling the cartridges we recommend you to clean the printheads of the cartridges by a steam generator. It will help you to fill the cartridges easily and will open the all clogged or dried printheads, So, your success rate will increase

To Order Call: [+90 312 417 72 75](tel:+903124177275)





Place the cartridge in to the evacuation station if necessary



Squeeze the cartridge by using the handle



Switch on the Evacuation switch to start Evacuation



Then remove the cartridge

To Order Call: [+90 312 417 72 75](tel:+903124177275)





Place the cartridge in to the filling station



Secure the cartridge by using the handle



Then remove the cartridge using the handle and test it

To Order Call: [+90 312 417 72 75](tel:+903124177275)



Tube replacement of motors



To Order Call: +90 312 417 72 75